


38" WHEELS PROTOTYPE  
CORRECT TRUCKS ARE 125 TON ASF  
CURRENT MFR : NONE  
STANDIN TRUCKS : BLMA 100 TON  
WITH 36" WHEELS  
MAY REQUIRE ATLAS PIN  
OR DRILL OR REAM TRUCK PIN HOLE  
TO 0.130" DIA FOR MT PIN  
FOX VALLEY MODELS WHEELS MAY  
BE SUBSTITUTED. USE 0.540" AXLE  
WHEELSETS.

**WINDOW GLAZING SUGGESTIONS:**  
AFTER PAINTING CAB, CUT 0.010" STYRENE SHEET  
TO FIT INTO OPENINGS. ADHERE IN PLACE WITH  
CLEAR LIQUID ACRYLIC.  
DO ONLY A FEW WINDOWS AT A TIME.

**TRUCK PIN GRIP HOLE SUGGESTIONS:**  
CAST HOLES MAY NOT BE PRECISION.  
THEREFORE A DRILL CAN 'CLEAN' IT ROUND AND TRUE.  
TO MAKE ONE SMALLER FOR A TIGHTER FIT, TAKE A  
SMALL AMOUNT OF AC ON THE END OF A SMALL TOOL  
AND SWIRL IT IN THE HOLE TO COAT THE WALL.  
USE ACCELERATOR AND LET IT HARDEN.  
THEN RUN THE DESIRED PROPER DRILL SIZE THRU  
THE COATED HOLE.


MAIN ARM ASSEMBLY

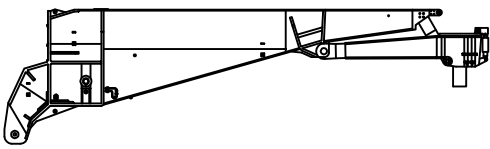

TOP SPANBOLSTER ASSEMBLY



5 TRUCK SPANBOLSTER ASSEMBLY



4 TRUCK SPANBOLSTER ASSEMBLY

