


38" WHEELS PROTOTYPE
CORRECT TRUCKS ARE 125 TON ASF
CURRENT MFR : NONE
STANDIN TRUCKS : BLMA 100 TON
WITH 36" WHEELS
MAY REQUIRE ATLAS PIN
OR DRILL OR REAM TRUCK PIN HOLE
TO 0.130" DIA FOR MT PIN
FOX VALLEY MODELS WHEELS MAY
BE SUBSTITUTED. USE 0.540" AXLE
WHEELSETS.

WINDOW GLAZING SUGGESTIONS:
AFTER PAINTING CAB, CUT 0.010" STYRENE SHEET
TO FIT INTO OPENINGS. ADHERE IN PLACE WITH
CLEAR LIQUID ACRYLIC.
DO ONLY A FEW WINDOWS AT A TIME.

TRUCK PIN GRIP HOLE SUGGESTIONS:
CAST HOLES MAY NOT BE PRECISION.
THEREFORE A DRILL CAN 'CLEAN' IT ROUND AND TRUE.
TO MAKE ONE SMALLER FOR A TIGHTER FIT, TAKE A
SMALL AMOUNT OF AC ON THE END OF A SMALL TOOL
AND SWIRL IT IN THE HOLE TO COAT THE WALL.
USE ACCELERATOR AND LET IT HARDEN.
THEN RUN THE DESIRED PROPER DRILL SIZE THRU
THE COATED HOLE.


MAIN ARM ASSEMBLY

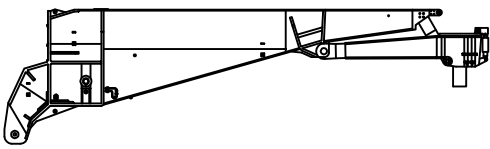

TOP SPANBOLSTER ASSEMBLY



5 TRUCK SPANBOLSTER ASSEMBLY



4 TRUCK SPANBOLSTER ASSEMBLY

